B1D

1

Miniature Circuit Breaker

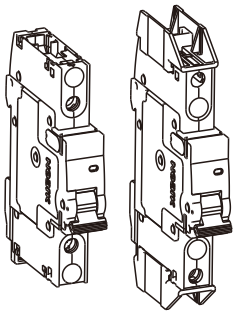

Installation Instructions

Notice d'installation

Instrucciones de montaje

Noark

B1D

2

WARNING

DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED.DEATH,SEVERE PERSONAL INJURY,OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT.ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING WITH THE TASK,AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.

NOARK IS NOT LIABLE FOR THE MISAPPLICATION OR IMPROPER INSTALLATION OF ITS PRODUCTS

B1D

3

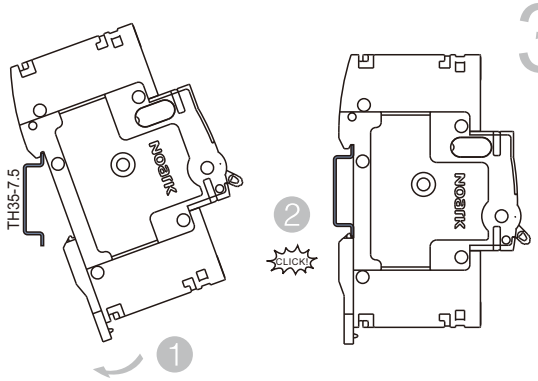

B1D

4

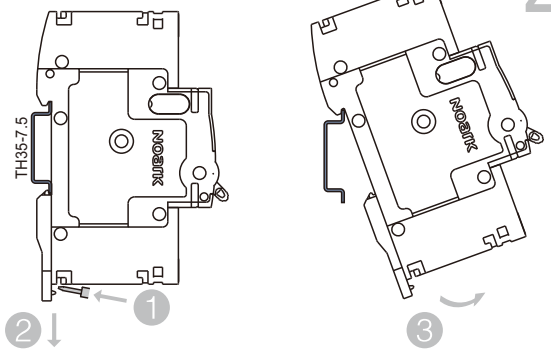

B1D

5

Single-wire connection

	Z2
Wire 1 and 2	18-4 AWG (0.75-25 mm²)
For #10(M5) Stud Ring Terminal Wire1*and 2*	Wire Range 18-8 AWG (0.75-10 mm²)
	31 lb·in (3.5 N·m)

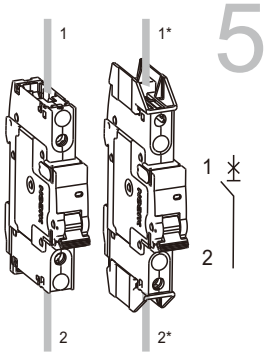

B1D

6

Multiple-wires connection

	Z2
Wire 1 and 2	18-6 AWG (0.75-16 mm²)
Wire 3 and 4	18-10 AWG (0.75-6 mm²)
	31 lb·in (3.5 N·m)

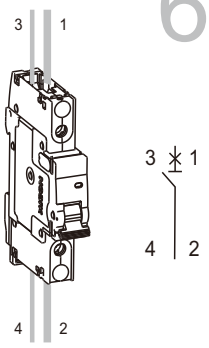

B1D

7

DC Wiring (Non-polarity)

Circuit diagram	Intended System
LOAD LOAD	Grounded Ungrounded
LOAD LOAD	Ungrounded Center grounded

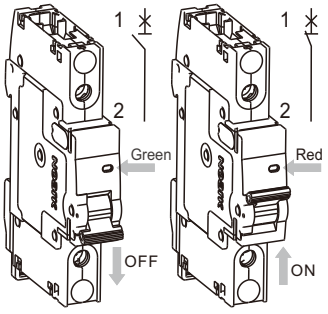

B1D

Noark

In order to protect the environment, when the product or its components are scrapped, please dispose of it as industrial waste or hand it over to the recycling station for disaggregation,recycling and reuse according to relevant national regulations.

Printed with environment-friendly paper

Copyright Noark.All Rights Reserved

na.noark-electric.com

11/2023