F30

1

Fuseholders

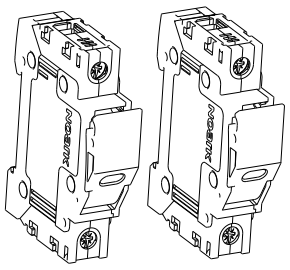

Installation Instrustions

Notice d' installation

Instrucciones de montaje

Noark

F30

2

WARNING

DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED. DEATH, SEVERE PERSONAL INJURY, OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.

NOARK IS NOT LIABLE FOR THE MISAPPLICATION OR MISINSTALLATION OF ITS PRODUCTS

F30

3

F30P / F30M

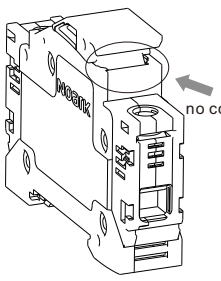

F30CC

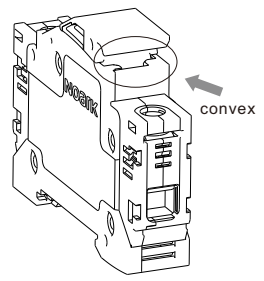

F30

4

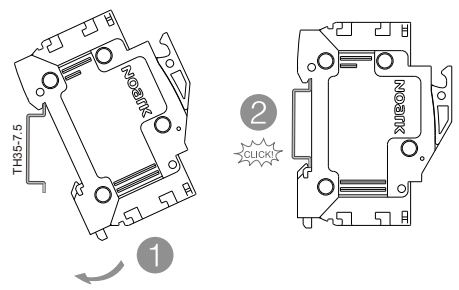

F30

5

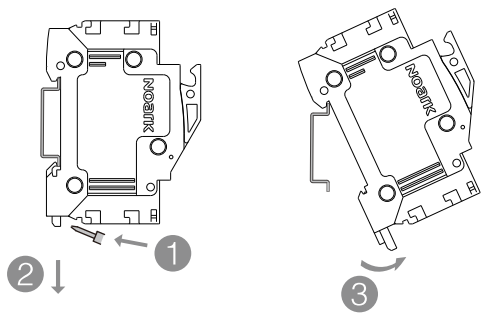

F30

6

F30CC / F30M

	Z2
Wire 1 and 2	18-6 AWG (0.75-10 mm²)
	18 lb • in (2 N • m)

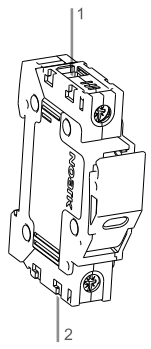



F30

7

F30P

Circuit diagram	Intended System
	Grounded Ungrounded
	Ungrounded Center grounded

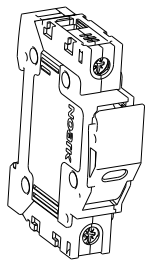



F30

8

This apply to F30*L.

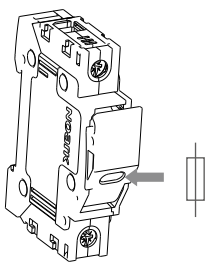

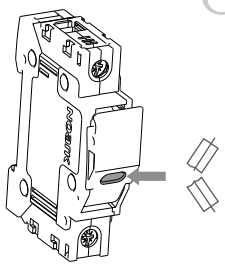

Failure indication light

F30

9

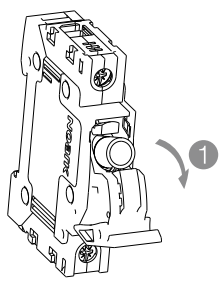

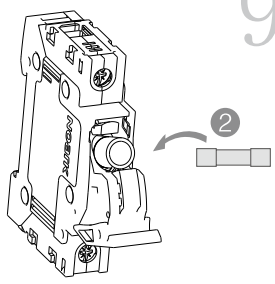

Fuse replacement

Noark

In order to protect the environment, when the product or its components are scrapped, please dispose of it as industrial waste or hand it over to the recycling station for disaggregation, recycling and reuse according to relevant national regulations.

Printred with environment-friendly paper

Copyright Noark. All Rights Reserved

na. noark-electric.com

08/2022